BIXOLON

API Reference Guide

Web Print SDK

Ver. 1.31

www.bixolon.com

Copyright

© BIXOLON Co., Ltd. All rights reserved.

This user manual and all property of the product are protected under copyright law.
It is strictly prohibited to copy, store, and transmit the whole or any part of the manual and any property of the product without the prior written approval of BIXOLON Co., Ltd.
The information contained herein is designed only for use with this BIXOLON product.
BIXOLON is not responsible for any direct or indirect damages, arising from or related to use of this information.

• The BIXOLON logo is the registered trademark of BIXOLON Co., Ltd.
• All other brand or product names are trademarks of their respective companies or organizations.

BIXOLON Co., Ltd. maintains ongoing efforts to enhance and upgrade the functions and quality of all our products.
In the following, product specifications and/or user manual content may be changed without prior notice.

Caution

Some semiconductor devices are easily damaged by static electricity. You should turn the printer “OFF”, before you connect or remove the cables on the rear side, in order to guard the printer against the static electricity. If the printer is damaged by the static electricity, you should turn the printer “OFF”.

Table of Contents

Copyright **2**

1. Manual Guide **6**

2. Overview of Web Print SDK API **7**
2-1 Features 7
2-2 Terminology 7
2-3 Supported OS 7
2-3-1 Windows 7
2-3-2 iOS 7
2-3-3 Android 7
2-3-4 macOS 7
2-4 Supported Interface 8
2-4-1 Windows 8
2-4-2 iOS 8
2-4-3 Android 8
2-4-4 macOS 8
2-5 Supported Web Browser 9
2-5-1 Windows 9
2-5-2 iOS 9
2-5-3 Android 9
2-5-4 macOS 9
2-6 Supported Printer Models 10
2-6-1 POS Printer 10
2-6-2 Label Printer 11
2-6-3 Mobile Receipt Printer 12
2-6-4 Mobile Label Printer 12
2-6-5 B-gate 12
2-6-6 Kiosk 12
2-7 Supported function 13
2-7-1 Port Settings 13
2-7-2 Repetitive request processing function 13

3. Common Reference **14**
3-1 Over view 14
3-2 Request URL 14
3-3 bxlcommon.js 15
3-3-1 Request for printing 15
3-3-2 Request for printing result 16
3-3-3 MSR Data request 17

4. POS Printer Reference **18**
4-1 Over view 18
4-2 bxlpos.js 18
4-2-1 Get Pos Data 18
4-2-2 Set Pos Id 19
4-2-3 Check Printer Status 20
4-2-4 Direct Print Text 21
4-2-5 Direct Print Hex 22
4-2-6 Cut Paper 23

4-2-7 Set International Charset 24
4-2-8 Set Character set 25
4-2-9 Print Text 27
4-2-10 Print 1D Barcode 29
4-2-11 Print PDF417 31
4-2-12 Print QRCode 32
4-2-13 Print GS1 Data bar 33
4-2-14 Print Data Matrix 34
4-2-15 Print Composite Barcode 35
4-2-16 Print Bitmap 37
4-2-17 Print Bitmap File 38
4-2-18 Print PDF File 40
4-2-19 Page mode Begin 42
4-2-20 Page mode Print Area 42
4-2-21 Page mode Print Position 42
4-2-22 Page mode Print Direction 43
4-2-23 Page mode End 44
4-2-24 Open Drawer 45
4-2-25 Set Alarm 46
4-2-26 Eject Paper 47
4-2-27 Retract Paper 48
4-2-28 Eject And Retract Paper 49
4-2-29 Get Presenter Status 50
4-3 Samples 51

5. Label Printer Reference 52
5-1 Over view 52
5-2 bxllabel.js 52
5-2-1 Get Label Data 52
5-2-2 Set Label Id 53
5-2-3 Check Label Status 54
5-2-4 Clear Buffer 55
5-2-5 Print Buffer 56
5-2-6 Direct Draw Text 57
5-2-7 Direct Draw Hex 58
5-2-8 Set Character set 59
5-2-9 Draw Device Font 61
5-2-10 Draw Vector Font 63
5-2-11 Draw True Type Font 65
5-2-12 Draw 1D Barcode 66
5-2-13 Draw Maxi Code 68
5-2-14 Draw PDF417 69
5-2-15 Draw QRCode 71
5-2-16 Draw Data Matrix 72
5-2-17 Draw Aztec 73
5-2-18 Draw Code49 75
5-2-19 Draw CODABLOCK 77
5-2-20 Draw Micro PDF 78
5-2-21 Draw IMB 79
5-2-22 Draw MSI Barcode 80
5-2-23 Draw Plessey Barcode 82
5-2-24 Draw TLC39 Barcode 83
5-2-25 Draw RSS Barcode 84

5-2-26 Draw Bitmap 86
5-2-27 Draw Bitmap File 87
5-2-28 Draw Circle 88
5-2-29 Draw Block 89
5-2-30 Set Printing Type 90
5-2-31 Set Margin 91
5-2-32 Set Length 92
5-2-33 Set Width 93
5-2-34 Set Speed 94
5-2-35 Set Density 95
5-2-36 Set Orientation 96
5-2-37 Set Offset 97
5-2-38 Set Tear off Position 98
5-2-39 Set Auto Cutter 99
5-2-40 Print PDF 100
5-2-41 Setup RFID 101
5-2-42 Set RFID Position 102
5-2-43 Set EPC Data Structure 103
5-2-44 Write RFID 104
5-2-45 Set RFID Password 105
5-2-46 Lock RFID 106
5-3 Samples 107

1. Manual Guide

This manual contains the information needed to create applications in using BIXOLON's label printers, POS printers and mobile printers with the BIXOLON Web Print SDK.

Those who are using the Web Print SDK are recommended to carefully read the instructions in this manual prior to use.

2. Overview of Web Print SDK API

2-1 Features

• The purpose of this API is to make the control of BIXOLON printer more accessible on web application.

2-2 Terminology

• JSON: As an abbreviation of JavaScript Object Notation, this data format gives and receives a simple form of data

2-3 Supported OS

2-3-1 Windows

Microsoft Windows 7(32bit/64bit)
Microsoft Windows 8(32bit/64bit)
Microsoft Windows 10(32bit/64bit)
Microsoft Windows 11 (64bit)

2-3-2 iOS

iOS 15.0 and later

2-3-3 Android

Android 6.0 and later

2-3-4 macOS

macOS 10.15 (Catalina) and later

2-4 Supported Interface

2-4-1 Windows

USB, Serial, Parallel, Bluetooth, Wi-Fi, Ethernet

2-4-2 iOS

Bluetooth, Wi-Fi, Ethernet, USB

2-4-3 Android

Bluetooth, Wi-Fi, Ethernet, USB

2-4-4 macOS

Bluetooth, Wi-Fi, Ethernet, USB



Refer to the user manual for each OS for installation and settings of the Web Print SDK.

2-5 Supported Web Browser

2-5-1 Windows

jQuery and XmlHttpRequest Object-enabled web browsers

Recommended Browsers
- Chrome
- Edge

2-5-2 iOS

Web Print SDK's Browser

2-5-3 Android

- Chrome Browser
- Web Print SDK's Browser

2-5-4 macOS

- Chrome Browser
- Safari Browser



If you use Chrome Browser, the Connection must be HTTPS after version 94.0.4606.61.

2-6 Supported Printer Models

2-6-1 POS Printer

SRP-S300 / SRP-S300II / SRP-S320
SRP-S200
SRP-Q300 / SRP-Q302
SRP-380 / SRP-382 / SRP-383
SRP-F310II / SRP-F312II / SRP-F313II
SRP-350plusIII / SRP-352plusIII
SRP-275III
SRP-S3000
SRP-330II / SRP-332II
SRP-330III / SRP-332III
SRP-Q200
SRP-QE300 / SRP-QE302
STP-103III
SRP-B300
SRP-B300II
SRP-350V / SRP-352V
SRP-350plusV / SRP-352plusV
SRP-380plus / SRP-382plus
G30
SRP-G300

2-6-2 Label Printer
SLP-TX400 / SLP-TX403
SLP-TX420 / SLP-TX423
SLP-TX220 / SLP-TX223
SLP-DX420 / SLP-DX423
SLP-DX220 / SLP-DX223
SLP-DL410 / SLP-DL413
XT5-40(RFID) / XT5-43(RFID) / XT5-46(RFID)
XL5-40CT / XL5-43CT
XD5-40d / XD5-43d
XD5-40IId / XD5-43IId
XD5-40t(RFID)/ XD5-43t(RFID)
XD5-40IIt(RFID)/ XD5-43IIt(RFID)
XD7-20d
BT3-40/ BT-43
BT5-40(RFID) / BT5-43(RFID) / BT5-46(RFID)
BD5-40d/ BD5-43d
BD5-40t(RFID)/ BD5-43t(RFID)
SRP-S3000_LABEL
XQ-840 / 840II / 843 / 843II(Android only)
XD3-40d / XD3-40t
SRP-E770III
XT3-40 / XT3-43
XT6-40 / XT6-40N / XT6-43 / XT6-43N / XT6-46 / XT6-46N
XT6-60N / XT6-63N
XF3-40

2-6-3 Mobile Receipt Printer
SPP-R200III
SPP-R310
SPP-R410
SPP-R210
SPP-R220
SPP-R230
SPP-C200
SPP-C300

2-6-4 Mobile Label Printer
SPP-L3000
XM5-30
XM7-20
XM7-30
XM7-40(RFID)
SPP-L310
SPP-L410

2-6-5 B-gate
BGT-100P / BGT-102P
SRP-Q300H / SRP-Q302H
SRP-S300H / SRP-S320H
SRP-F310IIH / SRP-F312IIH

2-6-6 Kiosk
BK3-31 / BK3-21
BK5-3
BK5-4
SPP-300

2-7 Supported function

2-7-1 Port Settings

The default value is 18080.

The reception port can be changed; in case of change, it is required to change the TCP port, which requests Web Print SDK to print on the web browser.

- When the listener port is overlapped with other APP used, it is necessary to change the reception port.
- When the listener port is overlapped, the Web Print SDK APP may operate abnormally.
- Without restart app after listener port is changed, the app may operate abnormally

2-7-2 Repetitive request processing function

If you use this feature, ignore duplicate print requests that occur in the Web Browser. Default setting of duplicate request processing is deactivated.

3. Common Reference

3-1 Over view

• bxlcommon.js file provides a function to request printing and check the printing result.

For communication with Web Print SDK App on the web browser, XmlHttpRequest and WebSocket object is used. The request for printing is implemented in requestPrint function, and checking for printing result is implemented in checkResult function.
MSR and output requests using Web Socket are implemented in WebSocketPrint function.

- For Windows version, a sample is automatically installed in the Web Print Server installation folder.
- JSON data uses UTF-8 encoding. If it is not UTF-8 encoding, the print may operate abnormally.

Sample composition
- Sample_PosPrinter.html: Receipt printer sample
- Sample_LabelPrinter.html: Label printer sample
- Sample_MSR.html: MSR sample
- js/bxlcommom.js: Request for printing and request for checking printing result
- js/bxlpos.js: JSON data generation API
- js/bxllabel.js: JSON data generation API

3-2 Request URL

Requirements	Method	URL
Request for printing	POST	/<Printer Name>
Request for printing result	POST	/<Printer Name>/check Status
Request for MSR Data	POST	/<Printer Name>/request MSR Data

3-3 bxlcommon.js



- Web Print SDK App request URL
  : http://127.0.0.1:18080/WebPrintSDK/
- It is declared as var serverURL in js.
- URL is case sensitive.
- WebSocket requests
  : ws://127.0.0.1:18080/WebPrintSDK/
- https / wss URL should be used for Secure Socket Layer (SSL) request.

3-3-1 Request for printing

Web Print SDK generates Xml Http Request Object or WebSocket and requests printing
The sequence of printing request is as follows:

1) Generate XmlHttpRequest or WebSocket object

```
//---------------------- XmlHttpRequest object generation code ------------------------
var httpRequest;
if (window.XMLHttpRequest)    {
      httpRequest = new XMLHttpRequest();
}

//------------------------- WebSocket object generation code -------------------------------
var _websocket;
_websocket = new WebSocket(uri);
```

2) Request printing with the printing request URL of Web Print SDK.

3-3-2 Request for printing result

Web Print SDK generates XmlHttpRequestObject requests checking for printing result.
The sequence of checking for printing result is as follows:

1) Generate XmlHttpRequest object.

2) Create JSON Data to request checking for printing result.

```
function makeResultInquiryData(requestId, responseId, timeout) {
   return "{\"RequestID\":"+requestId+",” +
          ”\"ResponseID\":\""+responseId+"\",”+
          ”\"Timeout\":"+timeout+"}";
}
```

Request the printing result of Web Print SDK to the URL.
Timeout unit is second



Connection is maintained until print processing is completed for WebSocket request so printing results are not requested.

3-3-3 MSR Data request

Web Print SDK generates XmlHttpRequest or WebSocket Object requests checking for MSR Data.
The sequence of MSR data request is as follows:

1) XmlHttpRequest or WebSocket Object is generated

2) MSR Data request JSON Data is generated

```
var inquiryData = "{\"Timeout\":"+timeout+"}";
```

Timeout indicates ready-time(Sec) for the MSR reading



Only available on the printer equipped with MSR.

4. POS Printer Reference

4-1 Over view

• bxlpos.js file provides a basic function for POS printer/mobile receipt printer device.
The structure of JSON data generated by bxlpos.js is as follows:

```
{
   “id”:1, //setId function
   “functions”:{     //printing function
            “func1”:{“function name”:[func1 parameters]},
            “func2”:{“function name”:[func2 parameters]},
              ....
              “funcN”:{“function name”:[funcN parameters]}
           }
}
```

4-2 bxlpos.js

4-2-1 Get Pos Data

Gets the generated json data.

[Syntax]
function getPosData()

[Return Value]
json data

[Example]

```
function getPosData()
{
    var strSubmit = getPosData();
    console.log(strSubmit);
}
```

4-2-2 Set Pos Id

When the repetitive request processing function is used, it is necessary to use this function.
When the repetitive request processing function is not used, it is not necessary to use this function.

[Syntax]
function setPosId(requestId)

[Parameters]
requestId: Print request Id value(Set by the user)

[Example]

```
function setPosId ()
{
    var issueID = 1;
    setPosId(issueID);

    issueID++;
}
```

4-2-3 Check Printer Status

To check the status of printer; when the printer is in error state, the function which is called afterwards is not processed.

[Syntax]
function checkPrinterStatus()

[Example]

```
function checkPrinterStatus ()
{
    checkPrinterStatus();
}
```

4-2-4 Direct Print Text

To send the text character string to the printer.

[Syntax]
function directPrintText(text)

[Parameters]
text: Character string to print out

[Example]

```
function directPrintText ()
{
    directPrintText (“Bixolon\n”);
}
```

4-2-5 Direct Print Hex

To convert the character string in a hexadecimal digit to hex value and send it to the printer.

[Syntax]
function directPrintHex(hexstring)

[Parameters]
hexstring: Character string in a hexadecimal digit to print out

[Example]

```
function directPrintHex ()
{
    directPrintHex("3132330a");
}
```

4-2-6 Cut Paper

To cut the paper

[Syntax]
function cutPaper(type)

[Parameters]
type: Cutting type(0: Cut in place, 1: Cut after feeding)

[Example]

```
function cutPaper ()
{
    cutPaper (1);
}
```

4-2-7 Set International Charset

To set up the International CharacterSet of the printer

[Syntax]
function setInternationalCharset(ics)

[Parameters]
ics: International Character Set value

Value	Description
0	U.S.A
1	France
2	Germany
3	U.K
4	Denmark I
5	Sweden
6	Italy
7	Spain I
8	Japan
9	Norway
10	Denmark II
11	Spain II
12	Latin America
13	Korea

[Example]

```
function setInternationalCharset ()
{
    // set U.S.A
    setInternationalCharset(0);
}
```

4-2-8 Set Character set

To set the printer code page; when the character string is printed, it is encoded as the same value as the printer code page

[Syntax]
function setCharacterset(charset)

[Parameters]
charset: codepage value

Value	Description
437	USA, Standard Europe (PC437)
1	Katakana
850	Multilingual (PC850)
860	Portuguese (PC860)
863	Canadian-French (PC863)
865	Nordic (PC865)
1252	Latin 1 (WPC1252)
866	Cyrillic #2 (PC866)
852	Latin 2 (PC852)
858	Euro (PC858)
862	Hebrew DOS code (PC862)
864	Arabic (Arabic)
1253	Greek (WPC1253)
1254	Turkish (WPC1254)
1257	Baltic (WPC1257)
27	Farsi
1251	Cyrillic (WPC1251)
737	Greek (PC737)
775	Baltic (PC775)
32	Hebrew Old code
1255	Hebrew New code (WPC1255)
34	Thai character code 11 (Thai 11)
35	Thai character code 18 (Thai 18)
855	Cyrillic (PC855)
857	Turkish (PC857)
928	Greek (PC928)
39	Thai character code 18 (Thai 16)
1256	Arabic
1258	Vietnamese (PC1258)
42	Khmer
1250	Czech
49	Vietnamese (TCVN-3)
50	Vietnamese (TCVN-3 Capital)
51	Vietnamese (VISCII)

949	Korean(KS5601)
932	Japanese(SHIFT_JIS)
950	Traditional Chinese(EUC-CN)
936	Simplified Chinese(GB2312)

[Example]

```
function setCharacterset ()
{
    // set PC437
    setCharacterset(437);
}
```

4-2-9 Print Text

To print out the character string

[Syntax]
function print Text(text, horizontal, vertical, bold, invert, underline, font type, alignment)

[Parameters]
1) text: Character string to print out
2) horizontal: Horizontal magnification of character(0: Default size, ..., 7: 8 times)
※ *Only 0 or 1 is allowed for SRP-275III*
3) vertical: Vertical magnification of character(0: Default size, ..., 7: 8 times)
※ *Only 0 or 1 is allowed for SRP-275III*
4) bold: Bold(Not setup: 0 or false, setup: 1 or true)
5) invert: Inverse(Not setup: 0 or false, setup: 1 or true)
6) underline: Under line(Not setup: 0 or false, setup: 1 or true)
7) font type: font selection

Value	Description
0	Font A
1	Font B
2	Font C

8) alignment: Alignment

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

[Example]

```
function printText ()
{
    printText("\n\nMiraeAsset Venture Tower 685 \n\n", 0, 0, false, false, false, 0, 1);
    printText("----------------------------------------\n", 0, 0, false, false, false, 0, 0);
    printText("Item name                Q'ty      price \n", 0, 0, false, false, false, 0, 0);
    printText("Items 1                   1        100.00\n", 0, 0, false, false, false, 0, 0);
    printText("Items 2                   1        200.00\n", 0, 0, false, false, false, 0, 0);
    printText("Items 3                   1        300.00\n", 0, 0, false, false, false, 0, 0);
    printText("Items 4                   1        400.00\n", 0, 0, false, false, false, 0, 0);
    printText("Items 5                   1        500.00\n", 0, 0, false, false, false, 0, 0);
     printText("----------------------------------------\n", 0, 0, false, false, false, 0, 0);
}
```

4-2-10 Print 1D Barcode

Print 1D Barcode.

[Syntax]
function print1DBarcode(data, symbol, barWidth, height, hriPosition, alignment)

[Parameters]
1) data: Barcode Data
2) symbol: Barcode Type

Value	Description
0	UPC A
1	UPC E
2	JAN8/EAN8
3	JAN13/EAN13
4	CODE39
5	ITF
6	CODABAR
7	CODE93
8	CODE128

3) bar Width: Horizontal size of the bar code(2~6)
4) height: height of the bar code(1 ~255)
5) hri Position: Selects the printing position of HRI

Value	Description
0	Not Printed
1	Above the barcode
2	Below the barcode

6) alignment: Alignment

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

[Example]

```
function print1DBarcode ()
{
    print1DBarcode("01234567890",0,4,70,2,1);
    print1DBarcode("01234567890",1,4,70,0,0);
    print1DBarcode("01234567890",8,4,70,0,2);
}
```

4-2-11 Print PDF417

Print to PDF417 barcode

[Syntax]
function printPDF417(data, symbol, alignment, columnNumber, rowNumber, moduleWidth, moduleHeight, eccLevel)

[Parameters]
1) data: Barcode Data
2) symbol: PDF417 Barcode Type

Value	Description
0	PDF417
1	PDF417 Simplified

3) alignment: Alignment selection

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

4) column Number: The number of columns in the data area of PDF417(0 ~ 30)
5) row Number: The number of rows in the data area of PDF417(3 ~ 90)
6) module Width: Module width(1 ~ 4)
7) module Height: Module height(2 ~ 8)
8) ecc Level: The error correction level for PDF417(0 ~ 8)

[Example]

```
function printPDF417 ()
{
    printPDF417("012345",0,2,20,3,1,2,4);
}
```

4-2-12 Print QRCode

Print to QR CODE

[Syntax]
function print QRCode(data, model, alignment, moduleSize, eccLevel)

[Parameters]
1) data: Barcode Data
2) model: QR CODE Type

Value	Description
0	Model 1
1	Model 2

3) alignment: Alignment selection

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

4) module Size: The Size of module(1 ~ 7)
5) ecc Level: the error correction level(0 ~ 3)

Value	Description
0	Level L 7%
1	Level M 15%
2	Level Q 25%
3	Level H 30%

[Example]

```
function printQRCode ()
{
    printQRCode("012345",0,1,6,1);
}
```

4-2-13 Print GS1 Data bar

Print to GS1Databar

[Syntax]
function printGS1Databar(data, symbol, alignment, moduleSize)

[Parameters]
1) data: Barcode Data
2) symbol: Barcode Type

Value	Description
0	GS1 DataBar
1	GS1 DataBar Omnidirectional

3) alignment: Alignment selection

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

4) module Size: The Size of module(1 ~ 8)

[Example]

```
function printGS1Databar ()
{
    printGS1Databar("012345",0,0,8);
}
```

4-2-14 Print Data Matrix

Print to DataMatrix

[Syntax]
function printDataMatrix(data, alignment, moduleSize)

[Parameters]
1) data: Barcode Data
2) alignment: Alignment selection

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

3) module Size: Module Size(2 ~ 3)

[Example]

```
function printDataMatrix ()
{
    printDataMatrix("012345",0,2);
}
```

4-2-15 Print Composite Barcode

Print to Composite Barcode

[Syntax]
function printCompositeBarcode(data, cData, symbol, cSymbol, alignment, moduleSize)

[Parameters]
1) data: First Barcode Data
2) cData: Second Barcode Data
3) symbol: The barcode type of first parameter

Value	Description
0	EAN8
1	EAN13
2	UPC-A
3	UPC-E
4	GS1 DataBar Omnidirectional
5	GS1 DataBar Turncated
6	GS1 DataBar Stacked
7	GS1 DataBar Stacked Omnidirectional
8	GS1 DataBar Limited
9	GS1 DataBar Expanded
10	GS1-128

4) cSymbol: The barcode type of second parameter

Value	Description
0	Automatic
1	Fixed to CC-C(Only GS1-128)

5) alignment: Alignment

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

6) module Size: The Size of module(1 ~ 8)

[Example]

```
function printCompositeBarcode ()
{
    printCompositeBarcode("012345", "012345",2,0,1,7);
}
```

4-2-16 Print Bitmap

Prints to image. Image data must be encoded by base64.

[Syntax]
function printBitmap(imagedata, width, alignment, dither)

[Parameters]
1) image data: Image data(base64 encoding)
2) width: Image width



When printing as much as the original size of the image -2

3) alignment: Alignment selection

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

4) dither: Dithering or Not(Not setup: 0 or false, Setup: 1 or true)

[Example]

```
function printBitmap ()
{
    var imgData = canvas.toDataURL();
    printBitmap(imgData, 400, 1, 1);
}
```

4-2-17 Print Bitmap File

Print the image file.

[Syntax]
function printBitmapFile(filepath, width, alignment, dither)

[Parameters]
1) file path: Image file path

Windows: full path
iOS: file name(filename in Document path)
Android: file name(File absolute path and file name)
macOS: file name(filename in ~/Library/Containers/com.MacOSWebPrintSDK/App)

2) width: Image width

When printing as much as the original size of the image -2

3) alignment: Print the image file.

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

4) dither: Dithering or Not(Not Used: 0 or false, Used: 1 or true)

If the width of the image is larger than the width of the receipt, the image may not be printed.

[Example]

```
function printBitmapFile ()
{
    //imageFileWindows must use the full path of the local pc.
    var imageFileWindows = "C:\\BIXOLON\\Web Print SDK\\logo.bmp";
    printBitmapFile(imageFileWindows,-2,1,false);

    //imageFileiOS must use the filename in Document.
    var imageFileiOS = "BIXOLON.bmp";
    printBitmapFile(imageFileiOS,-2,1,false);

    //imageFileAndroid must use the File absolute path and file name
    Var imageFileAndroid=" /storage/emulated/0/bixolon/logo.bmp";
    printBitmapFile(imageFileAndroid,-2,1,false);
}
```

4-2-18 Print PDF File

Print the PDF file.

[Syntax]
function printPDFFile(filepath, pageNumber, width, alignment, dither)

[Parameters]
1) file path: Image PDF path

Windows: not support
iOS: file name(filename in Document path)
Android: file path
macOS: file name(filename in ~/Library/Containers/com.MacOSWebPrintSDK/App)

2) page Number: Print Page

1st page of PDF is starts with Parameter 0
If the page number is non-existed, printing is not proceeded
Total page printing parameter is Total PDF page -1

3) width: Image width
4) alignment

Value	Description
0	Left-aligned
1	Centered
2	Right-aligned

5) dither: Dithering or Not(Not Used: 0 or false, Used: 1 or true)

If the width of the image is larger than the width of the receipt, the image may not be printed.

[Example]

```
function printPDFFile ()
{
    var filePath = "Test.pdf";
    printPDFFile(filePath,-1,550,0);
}
```

4-2-19 Page mode Begin

Enters 'Page' mode

[Syntax]
function pagemodeBegin()

4-2-20 Page mode Print Area

Sets the printing area of page mode.

[Syntax]
function pagemodePrintArea(width, height)

[Parameters]
1) width: Printing area Width
2) height: Printing area Height

4-2-21 Page mode Print Position

Sets the X and Y coordinates of the printing target in page mode.

[Syntax]
function pagemodePrintPosition(x,y)

[Parameters]
1) x: x-coordinate
2) y: y-coordinate

4-2-22 Page mode Print Direction

Sets the printing direction in page mode

[Syntax]
function pagemodePrintDirection(direction)

[Parameters]
direction: Print Direction

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
4	270 degrees

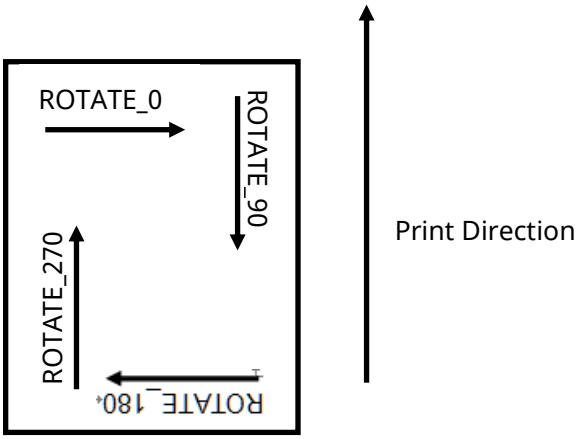

4-2-23 Page mode End

Leaves 'Page' mode, and then sends the data in the buffer to the printer.

[Syntax]
function pagemodeEnd()

[Example]

```
function PrintPagemode (rotation)
{

    pagemodeBegin();

    pagemodePrintArea(512, 1200);

    pagemodePrintDirection(rotation);

    if (rotation == 0) {//Normal
        pagemodePrintPosition(0, 80);
        printText("Web Print SDK!\n", 0, 1, false, false, false, 0, 0);
        pagemodePrintPosition(100, 150);
        printText("Test Print!!\n", 0, 0, false, false, false, 0, 0);
        pagemodePrintPosition(300, 350);
        printQRCode("http://www.bixolon.com", 0, 0, 5, 0);

    } else if(rotation == 1 || rotation == 3) {    //Left90 or Right90
        pagemodePrintPosition(300, 100);
        printText("Web Print SDK\n", 0, 1, false, false, false, 0, 0);
        pagemodePrintPosition(300, 170);
        printText("Test Print!!\n", 0, 0, false, false, false, 0, 0);
        pagemodePrintPosition(400, 350);
        printQRCode("http://www.bixolon.com", 0, 0, 5, 0);
    }

    else{//Rotate180
        pagemodePrintPosition(0, 0);
        printText("\n\nWeb Print SDK!\n", 0, 1, false, false, false, 0, 0);
        pagemodePrintPosition(200, 200);
        printText("Test Print!!\n", 0, 0, false, false, false, 0, 0);
        pagemodePrintPosition(300, 300);
        printText(pagemode_direct.value, 0, 0, false, false, false, 0, 0);
    }
    pagemodeEnd();
}
```

4-2-24 Open Drawer

Opens Cash Drawer.

[Syntax]
function openDrawer(pinNumber)

[Parameters]
pin Number: Drawer Pin Number(0: PIN2, 1: PIN5)

[Example]

```
function openDrawer(pinNumber)
{
    openDrawer(0);
}
```

4-2-25 Set Alarm

Set an alarm on the printer.

[Syntax]
function setAlarm(count)

[Parameters]
count: alarm count

[Example]

```
function setAlarm(count)
{
    setAlarm(1);
}
```

4-2-26 Eject Paper

Eject Paper.



Available with the BK3-3 and BK5-3 Presenter Accessory model only
Only Windows, aOS version is supported.

[Syntax]
function ejectPaper(hold)

[Parameters]
mode: sets the paper eject mode (0: Ejects paper all, 1: Ejects paper with hold(Defulat))

[Example]

```
function ejectPaper(hold)
{
    ejectPaper(0);
}
```

4-2-27 Retract Paper

Retract Paper.



Available with the BK3-3 and BK5-3 Presenter Accessory model only
Only Windows, aOS version is supported.

[Syntax]
function retractPaper()

[Example]

```
function retractPaper()
{
    retractPaper();
}
```

4-2-28 Eject And Retract Paper

Ejects paper, waits for a specified time, and retracts paper.



Available with the BK3-3 and BK5-3 Presenter Accessory model only
Only Windows, aOS version is supported.

[Syntax]
function ejectAndRetractPaper(timeout)

[Parameters]
timeout: sets the wait time (in seconds) before retracting the paper

[Example]

```
function ejectAndRetractPaper(timeout)
{
    ejectAndRetractPaper(5);
}
```

4-2-29 Get Presenter Status

Checks the status of the Presenter.



Available with the BK3-3 and BK5-3 Presenter Accessory model only
Only Windows, aOS version is supported.

[Syntax]
function getPresenterStatus()

[Example]

```
function getPresenterStatus()
{
    getPresenterStatus();
}
```

4-3 Samples

* sample code(Sample code is based on 3-inch paper.)

```
{
  setPosId(1);
  checkPrinterStatus();
  printBitmapFile("C:\\BIXOLON Web Print SDK\\logo.bmp",300,1,0);
printText("\n\nMiraeAsset Venture Tower 685,\nSampyeong-dong, Bundang-gu,\nSeongnam-si, Gyeonggi-do,\n463-400, Korea\n\n\n", 0, 0, false, false, false, 0, 1);
  printText("----------------------------------------\n", 0, 0, false, false, false, 0, 0);
  printText("Item name                Q'ty                price \n", 0, 0, false, false, false, 0, 0);
  printText("Items 1                   1                100.00\n", 0, 0, false, false, false, 0, 0);
  printText("Items 2                   1                200.00\n", 0, 0, false, false, false, 0, 0);
  printText("Items 3                   1                300.00\n", 0, 0, false, false, false, 0, 0);
  printText("Items 4                   1                400.00\n", 0, 0, false, false, false, 0, 0);
  printText("Items 5                   1                500.00\n", 0, 0, false, false, false, 0, 0);
  printText("----------------------------------------\n", 0, 0, false, false, false, 0, 0);
  printText("                          Sub-Total 895.0\n", 0, 1, true, false, false, 0, 0);
  printText("                          Discount       5.0\n", 0, 1, true, false, false, 0, 0);
  printText("                          ----------\n", 0, 0, false, false, false, 0, 0);
  printText("                          Tax Total 200.0\n", 0, 1, true, false, false, 0, 0);
  printText("                          ----------\n", 0, 0, false, false, false, 0, 0);
  printText("                          Total     1,000.0\n", 0, 1, true, false, false, 0, 0);
  printText("----------------------------------------\n", 0, 0, false, false, false, 0, 0);
  printText("Tel : 000 - 0000 - 0000\n", 0, 0, true, false, false, 0, 0);
  printText("Homepage : www.bixolon.com\n\n\n\n\n\n\n", 0, 0, false, false, false, 0, 0);
  printQRCode("www.bixolon.com",0,1,7,0);
  print1DBarcode("01234567890",0,4,70,2,1);
  printText("\n\n\n\n\n", 0, 0, false, false, false, 0, 0);
  cutPaper();
  var strSubmit = getPosData();
  console.log(strSubmit);
  requestPrint(p_name.value, strSubmit, viewResult);
  return true;
}
```

5. Label Printer Reference

5-1 Over view

• bxllabel.js file provides a basic function for Label printer device.

The structure of JSON data generated by bxlpos.js is as follows:

```
{
   “id”:1, //setId function
   “functions”:{     //printing function
            “func1”:{“function name”:[func1 parameters]},
            “func2”:{“function name”:[func2 parameters]},
             ....
             “funcN”:{“function name”:[funcN parameters]}
         }
}
```

5-2 bxllabel.js

5-2-1 Get Label Data

Gets the generated json data.

[Syntax]
function getLabelData()

[Return Value]
json data

[Example]

```
function getLabelData()
{
    var strSubmit = getLabelData();
    console.log(strSubmit);
}
```

5-2-2 Set Label Id

When the repetitive request processing function is used, it is necessary to use this function.
When the repetitive request processing function is not used, it is not necessary to use this function.

[Syntax]
function setLabelId(requestId)

[Parameters]
Request Id: Id value requesting printing(Set by the user)

[Example]

```
function setLabelId()
{
    var issueID = 1;
    setLabelId(issueID);
    issueID++;
}
```

5-2-3 Check Label Status

To check the status of printer; when the printer is in error state, the function which is called afterwards is not processed.

[Syntax]
function checkLabelStatus()

Value	Description
success	Normal (no errors)
error	Unknown error
printer open fail	Connect Fail
printer paper empty	No Paper
printer cover open	Cover Open
printer cutter jammed	Cutter jammed
printer tph over heat	TPH overheat
printer gap error	Gap error
printer ribbon end	Ribbon end error

[Example]

```
function checkLabelStatus ()
{
    checkLabelStatus();
}
```

5-2-4 Clear Buffer

To initialize the printer buffer

[Syntax]
function clearBuffer()

[Example]

```
function clearBuffer()
{
    clearBuffer();
}
```

5-2-5 Print Buffer

Starts printing the content of the printer buffer.

[Syntax]
function printBuffer()

[Example]

```
function printBuffer()
{
    printBuffer();
}
```

5-2-6 Direct Draw Text

Sends custom string data to the printer. It is available if you are using the label Command(SLCS Command). If there are no print commands within the string, It will not be print.

[Syntax]
function directDrawText(text)

[Parameters]
text: Print to text

[Example]

```
function directDrawText ()
{
    directDrawText("Bixolon\n");
}
```

5-2-7 Direct Draw Hex

Sends hexadecimal strings to the printer by converting to hexadecimal values If there are no print commands within the string, It will not be print.

[Syntax]
function directDrawHex(hexstring)

[Parameters]
hexstring: String of hexadecimal type to Print

[Example]

```
function directDrawHex ()
{
    directDrawHex("50302C30");
}
```

5-2-8 Set Character set

Sets the printer Code page. When you print string, it is encoded to the same value as the printer code page.

[Syntax]
function setCharacterset(ics, charset)

[Parameters]
1) ics: International Character Set Value

Value	Description
0	U.S.A
1	France
2	Germany
3	U.K
4	Denmark I
5	Sweden
6	Italy
7	Spain I
8	Norway
9	Denmark II
10	Japan
11	Spain II
12	Latin America
13	Korea
14	Slovenia/Croatia
15	China

2) charset: codepage Value

Value	Description
0	U.S.A(CP437)
1	Latin1(CP850)
2	Latin2(CP 852)
3	Portuguese(CP 860)
4	Canadian French(CP 863)
5	Nordic(CP 865)
6	Latin I(WCP 1252)
7	European Combined(CP 865 + WCP 1252)
8	Turkish(CP 857)
9	Greek(CP 737)
10	Latin 2(WCP 1250)
11	Greek(WCP 1253)
12	Turkish(WCP 1254)
13	Cyrillic(CP 855)
14	Hebrew(CP 862)
15	Cyrillic(CP 866)
16	Cyrillic(WCP 1251)
17	Hebrew(WCP 1255)
18	Greek(CP 928)
19	Arabic(CP 864)
20	Baltic(CP 775)
21	Baltic(WCP1257)
22	Latin 1 + Euro(CP858)

[Example]

```
function setInternationalCharset ()
{
    // set U.S.A
    setInternationalCharset(0, 0);
}
```

5-2-9 Draw Device Font

To input the character string by using the device font of the printer buffer

[Syntax]
function drawDeviceFont(text, x, y, fontType, widthEnlarge, heightEnlarge, rotation, invert, bold, alignment)

[Parameters]
1) text: Character string to print out
2) x: Location of x coordinate
3) y: Location of y coordinate
4) font Type: Font type

Value	Font Size	Width × Height(dots)
'0'	6	9 × 15
'1'	8	12 × 20
'2'	10	16 × 25
'3'	12	19 × 30
'4'	15	24 × 38
'5'	20	32 × 50
'6'	30	48 × 76
'7'	14	22 × 34
'8'	18	28 × 44
'9'	24	37 × 58
'a'	KOREAN 1	16 × 16(ascii 9×15)
'b'	KOREAN 2	24 × 24(ascii 12×24)
'c'	KOREAN 3	20 × 20(ascii 12×20)
'd'	KOREAN 4	26 × 26(ascii 16×30)
'e'	KOREAN 5	20 × 26(ascii 16×30)
'f'	KOREAN 6	38 × 38(ascii 22×34)
'm'	GB2312	24 × 24(ascii 12×24)
'n'	BIG5	24 × 24(ascii 12×24)
'j'	Shift JIS	24 × 24(ascii 12×24)

5) width Enlarge: Horizontal multiplier(1~4)
6) height Enlarge: Vertical multiplier(1~4)
7) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

8) invert: Inverse(Not setup: 0 or false, Setup: 1 or true)
9) bold: Bold(Not setup: 0 or false, Setup: 1 or true)
10) alignment: Text Alignment

Value	Description
0	Left Alignment
1	Right Alignment
2	Write text sting form right to left.

[Example]

```
function drawDeviceFont ()
{
    drawDeviceFont("1234567890",10,10,"0",2,2,3,0,0,0);
}
```

5-2-10 Draw Vector Font

To input the character string by using the vector font of the printer buffer

[Syntax]
function drawVectorFont(text, x, y, fontType, fontWidth, fontHeight, rightSpacing , bold, invert, italic, rotation, alignment, rtol)

[Parameters]
1) text: Character string to print out
2) x: Location of x coordinate
3) y: Location of y coordinate
4) font Type: Font type

Value	Description
'U'	ASCII
'K'	KS5601
'B'	BIG5
'G'	GB2312
'J'	Shift-JIS
'a'	OCR-A
'b'	OCR-B

5) font Width: Font width(dots)
6) font Height: Font height(dots)
7) right Spacing: Right-side character spacing(+, - option can be used : 5, +3, -10..)
8) bold: Bold(Not setup: 0 or false, Setup: 1 or true)
9) invert: Inverse(Not setup: 0 or false, Setup: 1 or true)
10) italic: Italic(Not setup: 0 or false, Setup: 1 or true)
11) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

12) alignment: Text Alignment

Value	Description
0	Left Alignment
1	Right Alignment
2	Centered

13) rtol: Character string printing direction(true: right to left, false: left to right)

[Example]

```
function drawVectorFont ()
{
    drawVectorFont("1234567890",10,10,'U',15,15,0,0,0,0,0,0,false);
}
```

5-2-11 Draw True Type Font

To input the character string by using the true type font of the printer buffer



Only Windows version is supported.

[Syntax]
function drawTrueTypeFont(text, x, y, fontname, fontsize, rotation, italic, bold, underline, compression)

[Parameters]
1) text: Character string to print out
2) x: Location of x coordinate
3) y: Location of y coordinate
4) font name: Font name
5) font size: Font size
6) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

7) italic: Italic(Not setup: 0 or false, Setup: 1 or true)
8) underline: Underline(Not setup: 0 or false, Setup: 1 or true)
9) bold: Bold(Not setup: 0 or false, Setup: 1 or true)
10) compression: Image compression(Not setup: 0 or false, Setup: 1 or true)

[Example]

```
function drawTrueTyperFont ()
{
    drawTrueTypeFont("1234567890",10,10,'Arial',10,0,0,0,0,0);
}
```

5-2-12 Draw 1D Barcode

To input one-dimension barcode on the printer buffer

[Syntax]
function draw1DBarcode(data, x, y, symbol, narrowbar, widebar, height, rotation, hri)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) symbol: Barcode type

Value	Description
0	Code39
1	Code128
2	Interleaved 2of5
3	Codabar
4	Code93
5	UPC-A
6	UPC-E
7	EAN13
8	EAN8
9	UCC/EAN128
10	Code11
11	Planet
12	Industrial 2of5
13	Standard 2of5
14	Logmars
15	UPC/EAN Extensions
16	Postnet

5) narrow bar: Narrow bar width
6) wide bar: Wide bar width
7) height: Barcode height
8) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

9) hri: HRI font size and location

Value	Description
0	Not Printed
1	Below the barcode(Font Size: 1)
2	Above the barcode(Font Size: 1)
3	Below the barcode(Font Size: 2)
4	Above the barcode(Font Size: 2)
5	Below the barcode(Font Size: 3)
6	Above the barcode(Font Size: 3)
7	Below the barcode(Font Size: 4)
8	Above the barcode(Font Size: 4)

[Example]

```
function draw1DBarcode ()
{
    draw1DBarcode("1234567890",10,10,1,3,2,96,0,3);
}
```

5-2-13 Draw Maxi Code

To input MaxiCode on the printer buffer

[Syntax]
function drawMaxiCode(data, x, y, mode)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) mode: Mode selection(0, 2, 3, 4)

Value	Description
0	Mode0
2	Mode2
3	Mode3
4	Mode4

[Example]

```
function drawMaxiCode ()
{
    drawMaxiCode("1234567890",10,10,0);
}
```

5-2-14 Draw PDF417

To input PDF417 on the printer buffer

[Syntax]
function drawPDF417(data, x, y, maxRowCount, maxColumnCount, eccLevel, dataCompressionMethod, hri, barcodeOriginPoint, moduleWidth, barHeight, rotation)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) max Row Count: Maximum Row Count(3~90)
5) max Column Count: Maximum Column Count(1~30)
6) ecc Level: Error Correction level(0 ~ 8)
7) data Compression Method: Data compression method

Value	Description
0	Text
1	Numeric
2	Binary

8) hri: Print HRI or not(Not setup: 0 or false, Setup: 1 or true)
9) barcode Origin Point: Barcode origin point

Value	Description
0	Center of barcode
1	Upper left corner of barcode

10) module Width: Module Width(2~9)
11) Bar Height: Bar Height(4~99)
12) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

[Example]

```
function drawPDF417 ()
{
    drawPDF417 ("1234567890",10,10,3,10,2,0,0,1, 2, 4, 0);
}
```

5-2-15 Draw QRCode

To input QRCode on the printer buffer
For an effective QRCode size value for each model, please refer to the product SLCS Command manual.

[Syntax]
function drawQRCode(data, x, y, model, eccLevel, size, rotation)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) model

Value	Description
0	Model1
1	Model2

5) ecc Level: Error Correction level(L, M, Q, H)

Value	Description
'L'	7%
'M'	15%
'Q'	25%
'H'	30%

6) size: Barcode size(1~9)
7) rotation: Rotation

Value	Rotation
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

[Example]

```
function drawQRCode ()
{
    drawQRCode("1234567890",10,10,0,'L',4,0);
}
```

5-2-16 Draw Data Matrix

To input DataMatrix on the printer buffer

[Syntax]
function drawDataMatrix(data, x, y, size, invert, rotation)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) size: Barcode size(1~4)
5) invert: Inverse(Not setup: 0 or false, setup: 1 or true)
6) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

[Example]

```
function drawDataMatrix()
{
    drawDataMatrix("1234567890",10,10,3,0,0);
}
```

5-2-17 Draw Aztec

To input Aztec barcode on the printer buffer

[Syntax]
function drawAztec(data, x, y, size, extendedChannel, eccSymbol, menuSymbol, numberOfSymbols, optionalID, rotation)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) size: Barcode size(1~10)
5) extended Channel: Extended channel interpretation code(Not setup: 0 or false, Setup: 1 or true)
6) ecc Symbol: Error control and symbol size/type

Value	Description
0	Default error correction level
1 ~ 99	Error correction percentage
101~104	1 ~ 4 layer compact symbol
201~232	1 ~ 32 layer full range symbol
300	Simple Aztec “Rune”

7) menu Symbol: Menu Symbol(Not setup: 0 or false, Setup: 1 or true)
8) number Of Symbols: Number of symbols for structured append(1~26)
9) optional ID: Optional ID field for structured append(1~24)
10) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

[Example]

```
function drawAztec()
{
    drawAztec("1234567890",10,10,5,0,10,0,10,1,0);
}
```

5-2-18 Draw Code49

To input Code49 barcode on the printer buffer

[Syntax]
function drawCode49(data, x, y, narrowbar, widebar, height, hri, starting, rotation)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) narrow bar: Narrow bar width
5) wide bar: Wide bar width
6) height: Barcode height
7) hri: HRI location(0~2)

Value	Description
0	Not Printed
1	Below the barcode
2	Above the barcode

8) starting

Value	Description
0	Regular Alphanumeric Mode
1	Multiple Read Alphanumeric
2	Regular Numeric Mode
3	Group Alphanumeric Mode
4	Regular Alphanumeric Shift 1
5	Regular Alphanumeric Shift 2
7	Automatic Mode

9) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

[Example]

```
function drawCode49()
{
    drawCode49 ("1234567890",10,10,2,4,96,1,0,0);
}
```

5-2-19 Draw CODABLOCK

To input CODABLOCK barcode on the printer buffer

[Syntax]
function drawCODABLOCK(data, x, y, narrowbar, widebar, height, security, dataColumns, mode, rowsEncode)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) narrow bar: Narrow bar width
5) wide bar: Wide bar width
6) height: Barcode height
7) security: Security(Not setup: 0 or false, Setup: 1 or true)
8) data Columns: (2~62)
9) mode

Value	Description
'A'	CODABLOCK A mode uses the Code 39 character set
'E'	CODABLOCK E mode uses the Code 128 character set
'F'	CODABLOCK F mode uses the Code 128 character set and Automatically adds Function 1.(FNC1)

10) rows Encode

Value	Description
1 ~ 18	When user select mode 'A'.
2 ~ 4	When user select mode 'E', 'F'.

[Example]

```
function drawCODABLOCK()
{
    drawCODABLOCK("1234567890",10,10,2,4,96,0,5,'A',3);
}
```

5-2-20 Draw Micro PDF

To input MicroPDF barcode on the printer buffer

[Syntax]
function drawMicroPDF(data, x, y, moduleWidth, height, mode, rotation)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) module Width: Module width(2~8)
5) height: Barcode height(1~99)
6) mode: Barcode mode(0~33)
7) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

[Example]

```
function drawMicroPDF()
{
    drawMicroPDF("1234567890",10,10,2,96,1,0);
}
```

5-2-21 Draw IMB

To input IMB barcode on the printer buffer

[Syntax]
function drawIMB(data, x, y, roration, hri)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

5) hri: HRI Set(Not setup: 0 or false, Setup: 1 or true)

[Example]

```
function drawIMB()
{
    drawIMB("1234567890",10,10,0,0);
}
```

5-2-22 Draw MSI Barcode

To input MSI barcode on the printer buffer

[Syntax]
function drawMSIBarcode(data, x, y, narrowbar, widebar, height, checkdigit, checkdigitHri, rotation, hri)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) narrow bar: Narrow bar width
5) wide bar: Wide bar width
6) height: Barcode height
7) check digit: Check digit selection

Value	Description
0	No check digits
1	1 Mod 10
2	2 Mod 10
3	1 Mod 11 and 1 Mod 10

8) check digit Hri: Check digit printing on HRI(Not setup: 0 or false, Setup: 1 or true)
9) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

10) hri

Value	Description
0	Not Printed
1	Below the barcode
2	Above the barcode

[Example]

```
function drawMSIBarcode()
{
    drawMSIBarcode("1234567890",10,10,2,4,96,0,0,0,0);
}
```

5-2-23 Draw Plessey Barcode

To input Plessey barcode on the printer buffer

[Syntax]
function drawPlesseyBarcode(data, x, y, narrowbar, widebar, height, checkdigitHri, rotation, hri)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) narrow bar: Narrow bar width
5) wide bar: Wide bar width
6) height: Barcode height
7) check digit Hri: Print check digit(Not setup: 0 or false, Setup: 1 or true)
8) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

9) hri

Value	Description
0	Not Printed
1	Below the barcode
2	Above the barcode

[Example]

```
function drawPlesseyBarcode()
{
    drawPlesseyBarcode("1234567890",10,10,2,4,96,0,0,0);
}
```

5-2-24 Draw TLC39 Barcode

To input TLC39 barcode on the printer buffer.

[Syntax]
function drawTLC39Barcode(data, x, y, narrowbar, widebar, height, pdf417Height, pdf417narrowbar, rotation)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) narrow bar: Narrow bar width
5) wide bar: Wide bar width
6) height: Barcode height
7) pdf417Height: Row height of the Micro PDF417(1~255)
8) pdf417narrow bar: Narrow bar width of the Micro PDF417(1~10)
9) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

[Example]

```
function drawTLC39Barcode()
{
    drawTLC39Barcode("1234567890",10,10,2,4,96,50,1,0);
}
```

5-2-25 Draw RSS Barcode

To input RSS barcode on the printer buffer.

[Syntax]
function drawRSSBarcode(data, x, y, rssType, magnification, separatorHeight, barcodeHeight, segmentWidth, rotation)

[Parameters]
1) data: Barcode data
2) x: Location of x coordinate
3) y: Location of y coordinate
4) rss Type: RSS Barcode type(0~11)

Value	Description
0	RSS14
1	RSS14 Truncated
2	RSS14 Stacked
3	RSS14 Stacked Omnidirectional
4	RSS Limited
5	RSS Expanded
6	UPC-A
7	UPC-E
8	EAN-13
9	EAN-8
10	UCC/EAN-128 and CC-A/B
11	UCC/EAN-128 and CC-C

5) magnification: Magnification(1~10)
6) separator Height: separator height(1~2)
7) barcode Height: Barcode height(This parameter only affects the UCC/EAN barcode type and CC-A/B/C barcode type)
8) segment Width: segment Width(0~22 Even numbers only, this parameter only affects the RSS Expanded barcode type.)
9) rotation: Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

[Example]

```
function drawRSSBarcode()
{
    drawRSSBarcode("1234567890",10,10,0,1,1,0,0,0);
}
```

5-2-26 Draw Bitmap

To input image data on the printer buffer; the image data should be encoded as base64. Any image on the web application server can be printed by base64 encoding.

[Syntax]
function drawBitmap(data,x,y, width, dither)

[Parameters]
1) data: Image data encoded as base64.
2) x: Location of x coordinate
3) y: Location of y coordinate
4) width: Image width
5) dither: Dither or not(Not setup: 0 or false, Setup: 1 or true)

[Example]

```
function drawBitmap ()
{
    var imgData = canvas.toDataURL();
    drawBitmap(imgData, 10, 10, 400, 0);
}
```

5-2-27 Draw Bitmap File

To input an image file on the printer buffer; only Windows version is supported.

[Syntax]
function drawBitmapFile(filepath,x, y, width, dither)

[Parameters]
1) file path: Path of image file to print out



Windows: full path
iOS: file name(filename in Document path)
Android: file name(File absolute path and file name)
macOS: file name(filename in ~/Library/Containers/com.MacOSWebPrintSDK/App)

2) x: Location of x coordinate
3) y: Location of y coordinate
4) width: Image width
5) dither: Dither or not(Not setup: 0 or false, Setup: 1 or true)

[Example]

```
function drawBitmapFile ()
{
    //imageFileWindows must use the full path of the local pc.
    var imageFileWindows = "C:\\BIXOLON\\Web Print SDK\\logo.bmp";
    drawBitmapFile(imageFileWindows,10,10,400,false);

    //imageFileiOS must use the filename in Document.
    var imageFileiOS = "BIXOLON.bmp";
    drawBitmapFile(imageFileiOS,10,10,400,false);

    //imageFileAndroid must use the File absolute path and file name
    Var imageFileAndroid=" /storage/emulated/0/bixolon/logo.bmp";
    drawBitmapFile(imageFileAndroid,10,10,400,false);
}
```

5-2-28 Draw Circle

To input circle data on the printer buffer

[Syntax]
function drawCircle(startHorizontal, startVertical, circleSize, muliplier)

[Parameters]
1) start Horizontal: Location of x coordinate
2) start Vertical: Location of y coordinate
3) circle Size: Circle Size Selection(1~6)

Value	Description(Circle diameter)
1	5 mm
2	7 mm
3	9 mm
4	11 mm
5	13 mm
6	21 mm

4) muliplier: Circle Multiplier(1~4)

[Example]

```
function drawCircle()
{
    drawCircle(10,10,2,1);
}
```

5-2-29 Draw Block

To input line, diagonal line and square data

[Syntax]
function drawBlock(startHorizontal, startVertical, endHorizontal, endVertical, option, thickness)

[Parameters]
1) start Horizontal: Location of x coordinate starting in the horizontal direction
2) start Vertical: Location of y coordinate starting in the horizontal direction
3) end Horizontal: Location of x coordinate ending in the horizontal direction
4) end Vertical: Location of y coordinate ending in the horizontal direction
5) option:

Value	Description
'O'	Line Overwriting(Overwrite an overlapped part)
'E'	Line Exclusive OR(Not print out an overlapped part)
'D'	Line Delete(Delete an overlapped part)
'S'	Slope(Diagonal line)
'B'	Box(Square)

6) thickness: Thickness of diagonal line or square
(This parameter is required to have "diagonal line ("S")" or "square ("B")" as "optionvalue.)

[Example]

```
function drawBlock()
{
    drawBlock(10,10,50,50,'B',5);
}
```

5-2-30 Set Printing Type

To select the printing type as Thermal Direct or Thermal Transfer mode.



If you make an invalid setup, the printer may not function properly.

[Syntax]
function setPrintingType(type)

[Parameters]
type: Printing type selection

Value	Description
'd'	Direct Thermal
't'	Thermal Transfer

[Example]

```
function setPrintingType()
{
    setPrintingType('d');
}
```

5-2-31 Set Margin

To designate the margin of image buffer

[Syntax]
function setMargin(horizontal, vertical)

[Parameters]
1) horizontal: Horizontal margin
2) vertical: Vertical margin

[Example]

```
function setMargin()
{
    setMargin(10,10);
}
```

5-2-32 Set Length

To set up the length of paper, length of gap/black mark and paper type of the printer
In case of continuous paper, it is necessary to use this instruction. In case of black mark or gap paper, it is not necessary to use the instruction.

[Syntax]
function setLength(labelLength, gapLength, mediaType, offset)

[Parameters]
1) label Length: Label length
2) gap Length: Gap length or thickness of black line
3) MediaType: Media Type

Value	Description
'G'	Gap
'C'	Continuous
'B'	Black Mark

4) offset: offset Length

[Example]

```
function setLength()
{
    setLength(1200,0,'C',0);
}
```

5-2-33 Set Width

To set up the width of paper of the printer

[Syntax]
function setWidth(width)

[Parameters]
width: The reference point to calculate the width and width of label is the center.

[Example]

```
function setWidth()
{
    setWidth(832);
}
```

5-2-34 Set Speed

To set up the speed of printing; it is ignored when an ineffective value for each model is used. For an effective value for each model, please refer to the product SLCS Command manual.

[Syntax]
function setSpeed(speed)

[Parameters]
speed: Speed set value(0~12)

Value	Description
0	2.5 ips
1	3.0 ips
2	4.0 ips
3	5.0 ips
4	6.0 ips
5	7.0 ips
6	8.0 ips
7	9.0 ips
8	10.0 ips
9	11.0 ips
10	12.0 ips
11	13.0 ips
12	14.0 ips

[Example]

```
function setSpeed()
{
    setSpeed(4);
}
```

5-2-35 Set Density

To set up the concentration of printing; it is ignored when an ineffective value for each model is used. For an effective value for each model, please refer to the product manual.

[Syntax]
function setDensity(density)

[Parameters]
density: Density Level(0~20)

[Example]

```
function setDensity()
{
    setDensity(15);
}
```

5-2-36 Set Orientation

To set up the direction of printing

[Syntax]
function setOrientation(orientation)

[Parameters]
orientation: Printing direction

Value	Description
'T'	To print out from top to bottom
'B'	To print out from bottom to top

[Example]

```
function setOrientation()
{
    setOrientation('T');
}
```

5-2-37 Set Offset

To set up the length of offset between gap or black mark and cutoff line; the position of starting printing is adjusted.

[Syntax]
function setOffset(offset)

[Parameters]
offset: offset value(-100 ~ 100)

[Example]

```
function setOffset()
{
    setOffset(50);
}
```

5-2-38 Set Tear off Position

To adjust the position of tearing off the label after printing

[Syntax]
function setTearoffPosition(position)

[Parameters]
position: Position(-100~100)

[Example]

```
function setTearoffPosition ()
{
    setTearoffPosition (50);
}
```

5-2-39 Set Auto Cutter

To set up whether the auto cutter is used or not

[Syntax]
function setAutoCutter(enable, period)

[Parameters]
1) enable: Whether the cutter is used or not(not used: 0 or false, used: 1 or true)
2) period: To determine an interval of pages for cutting

[Example]

```
function setAutoCutter ()
{
    setAutoCutter (1, 3);
}
```

5-2-40 Print PDF

Print the PDF file.

[Syntax]
function printPDF(filepath, pageNumber, width, dither)

[Parameters]
1) file path: Image PDF path

	Windows: not support iOS: file name(filename in Document path) Android: file path macOS: file name(filename in ~/Library/Containers/com.MacOSWebPrintSDK/App)

2) page Number: Print Page

	1st page of PDF is starts with Parameter 0 If the page number is non-existed, printing is not proceeded Total page printing parameter is Total PDF page -1

3) width: Image width
4) dither: Dithering or Not(Not Used: 0 or false, Used: 1 or true)

	This function support PDF printing without calling printBuffer() If other API is called to draw the printing contents before printPDF(), call printBuffer() or clearBuffer() to make buffer memory empty.

[Example]

```
function printPDFFile ()
{
    var filePath = "Test.pdf";
    printPDF(filePath,-1,550,0);
}
```

5-2-41 Setup RFID

For setting the RFID transponder type, number of coding retries, number of labels upon retry, and sending/receiving power

[Syntax]
function setupRFID(rfidType, numberOfRetries, numberOfLabel, radioPower)

[Parameters]
1) rfid Type: RFID Transponder Type(0~5)
2) number Of Retries: Number of Coding Retries Upon Coding Failure(1~10)
3) number Of Label: Number of Labels Upon Retry Following RFID Label Writing Failure (1~5)
4) radio Power: Sending/Receiving Power Adjustment(0~30)

[Example]

```
function setupRFID ()
{
   setupRFID (5, 2, 2, 21);
}
```

5-2-42 Set RFID Position

For setting the RFID label coding position.

[Syntax]
function setRFIDPosition(transPosition)

[Parameters]
Trans Position: RFID Label Coding Position(Y-Axis Value)

[Example]

```
function setRFIDPosition ()
{
    setRFIDPosition (320);
}
```

5-2-43 Set EPC Data Structure

Defines the EPC Data structure for writing EPC Data

[Syntax]
function setEPCDataStructure(totalSize, fieldSize)

[Parameters]
1) total Size: Total amount of bits in field
2) field Size: amount of bits in each field

[Example]

```
function setEPCDataStructure ()
{
    setEPCDataStructure (64, “8,8,8,8,8,8,8,8”);
}
```

5-2-44 Write RFID

For writing RFID labels.

[Syntax]
function writeRFID(dataType, startingBlockNumber, dataLength, data)

[Parameters]
1) data Type: Data Type(A: Ascii, H: Hexadecimal, E: EPC, U: User field select)
2) starting Block Number: Starting Block Number(4~10)
3) data Length: Number of Bytes for Reading or Writing(2~12)
4) data: Write data

[Example]

```
function writeRFID ()
{
    writeRFID ('E',4, 2, "1,2,3,4,5,6,7,8");
}
```

5-2-45 Set RFID Password

Setting RFID Access Password and Kill Password.

[Syntax]
function setRFIDPassword(oldAccessPwd, oldKillPwd, newAccessPwd, newKillPwd)

[Parameters]
1) old Access Pwd: Old Access Password
2) old Kill Pwd: Old Kill Password
3) new Access Pwd: New Access Password
4) new Kill Pwd: New Kill Password

[Example]

```
function setRFIDPassword ()
{
    setRFIDPassword (“0000”, “0000”, “1111”, “1111”);
}
```

5-2-46 Lock RFID

For locking kill, access, and EPC data via the access password

[Syntax]
function lockRFID();

[Example]

```
function lockRFID ()
{
    lockRFID ();
}
```

5-3 Samples

* sample code(Sample code is based on 4 x 6 inch paper.)

```
{
        setLabelId(issueID);
        checkLabelStatus();
        clearBuffer();
        drawDeviceFont("1234567890",32,1115,"0",2,2,3,0,0,0);
        drawTrueTypeFont("S63",60,880,"Arial",80,3,false,true,false,true);
        drawDeviceFont("-",110,930,"1",2,2,3,0,1,0);
        drawDeviceFont("0",80,900,"4",2,2,3,0,1,0);
        draw1DBarcode("1234567890",213,1165,1,3,2,96,3,3);
        drawDeviceFont("BIXOLON",359,1200,"a",2,2,3,0,1,0);
        drawDeviceFont("010-0000-0000",400,1200,"0",2,2,3,0,1,0);
        drawDeviceFont("031-000-0000",430,1200,"0",2,2,3,0,1,0);
        drawDeviceFont("344, Bundang-gu, Seongnam-si, Gyeonggi- ",
                        459,1200,"b",1,1,3,0,1,0);
        drawDeviceFont("(6th, IDIS TOWER)",492,1200,"b",1,1,3,0,1,0);
        drawDeviceFont("1 / 1",630,1150,"b",2,2,3,0,1,0);
        drawBitmapFile("C:\\BIXOLON Web Print SDK\\BIXOLON.bmp",0,80,100,0);
        drawBitmapFile("C:\\BIXOLON Web Print SDK\\BIXOLON.bmp",100,60,200,0);
        drawBitmapFile("C:\\BIXOLON Web Print SDK\\BIXOLON.bmp",200,50,300,0);
        drawBitmapFile("C:\\BIXOLON Web Print SDK\\BIXOLON.bmp",300,50,350,0);
        drawBlock(10,10,800,1210,"B",5);
        printBuffer();
        var strSubmit = getLabelData();
        console.log(strSubmit);
        issueID++;
        requestPrint(p_name.value, strSubmit, viewResult);
}
```

Revision history

Ver.	Date	Description
1.00	02-05-2019	New
1.01	17-05-2019	- Information of supported printers added. (XL5-40, XL5-43, XD5-40d, XD5-43d) - Modifying support range that Size parameter of drawQRcode API 4 -> 9
1.02	02-09-2019	- App name changed. (mPrint Browser -> mPrint Server)
1.03	29-11-2019	- Information of supported printers added : XD5-40t, XD5-43t : XM7-40 - Information of supported printers Changed : XL5-40 -> XL5-40CT : XL5-43 -> XL5-43CT
1.04	20-12-2019	- Add API Example
1.05	09-01-2020	- Add a comment about exception handling(SRP-275III)
1.06	11-03-2020	- Information of supported printers added : XM7-20
1.07	14-09-2020	- Modify support OS(Windows) - Indication of RFID support - Supported RFID API Added : setupRFID, calibrateRFID, writeRFID, setRFIDPosition, setEPCDataStructure, setRFIDPassword, lockRFID
1.08	14-01-2021	- Information of supported printers added : SRP-B300, XQ-840
1.09	06-05-2021	- Information of supported printers added : SRP-S320, SRP-S200, SRP-S3000, SRP-330II/332II, SRP-Q200, SRP-QE300/QE302, STP-103III : SRP-S3000_LABEL, XQ-843, XD3-40d/43d, XD3-30t/43t, SRP-E770III : SPP-R210, SPP-R220 : SPP-L310, SPP-L410 : SRP-S320H - App name changed (mPrintServer -> WebPrintSDK) - Supported Web Socket, SSL (aOS)

1.10	26-08-2021	- Information of supported printers added : XT3-40, XT3-43, XM7-40R - Supported Web Socket, SSL (Windows, iOS)
1.11	01-10-2021	- Add a comment about HTTPS at Supported Browser
1.12	23-11-2021	- Information of supported printers added : SPP-C200, SPP-C300
1.13	20-01-2022	- Information of supported printers added : XF3-40 - Modify drawDataMatrix API Sample
1.14	21-04-2022	- Information of supported printers added : XM7-30
1.15	23-05-2022	- Information of supported printers added : SRP-330III, SRP-332III - Modify Recommended Browsers(IE 11 removed)
1.16	22-06-2022	- Information of supported printers added : SRP-350V, SRP-352V, SRP-350plusV, SRP-352plusV
1.17	21-07-2022	- Information of supported printers added : SRP-380II, SRP-382II
1.18	17-02-2023	- Modify printPDFFIle and printPDF API in Android
	20-03-2023	- Information of supported printers added :G30 - Added setAlarm API
1.19	04-04-2024	- Information of supported printers added :XQ-840II, XQ843II
1.20	12-06-2024	- Information of supported printers added :SRP-S300II
1.21	02-08-2024	- Information of supported printers added : XD5-40IId, XD5-43IId, XD5-40IIt, XD5-43IIt
1.22	11-11-2024	- Compatibility extended for macOS
1.23	26-12-2024	- Information of supported printers Changed :SRP-380II, SRP-382II->SRP-380plus, SRP-382plus - Information of supported printers added :BK3-31, BK3-21, BK5-3 - Added ejectPaper, retractPaper, ejectAndRetractPaper, getPresenterStatus API - Modify Parameters related to Vietnamese in setCharacterset - Added supported OS (Windows 11)
1.24	07-03-2025	- Information of supported printers added :XT6-60N, XT6-63N, XM5-30
1.25	25-03-2025	- Information of supported printers added :SRP-G300, BK5-4
1.26	24-04-2025	- Information of supported printers added : BT3-40/ BT-43, BT5-40(RFID) / BT5-43(RFID) / BT5-46(RFID),

		BD5-40d/ BD5-43d, BD5-40t(RFID)/ BD5-43t(RFID)
1.27	29-05-2025	- Information of supported printers added : SRP-B300II
1.28	06-08-2025	- Information of supported printers added : XD7-20d - Add response values to checkLabelStatus
1.29	18-09-2025	- Information of supported printers added : XT6-40, XT6-40N, XT6-43, XT6-43N, XT6-46, XT6-46N
1.30	29-12-2025	- Information of supported printers added : SPP-300
1.31	16-03-2026	- Information of supported printers added : SPP-R230